


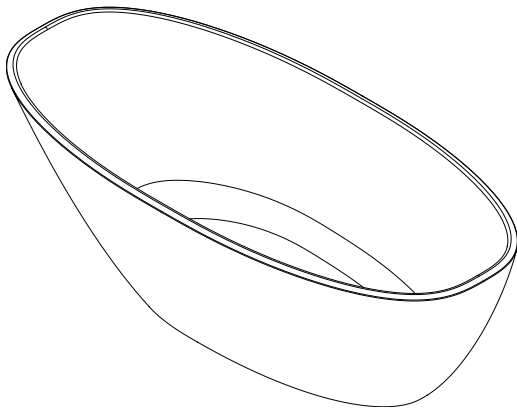
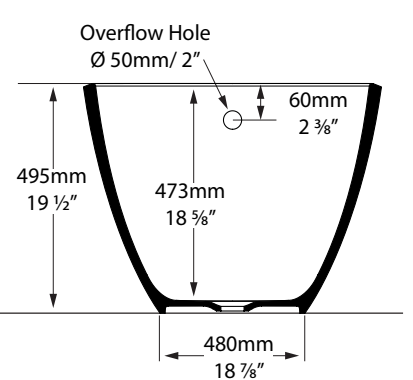
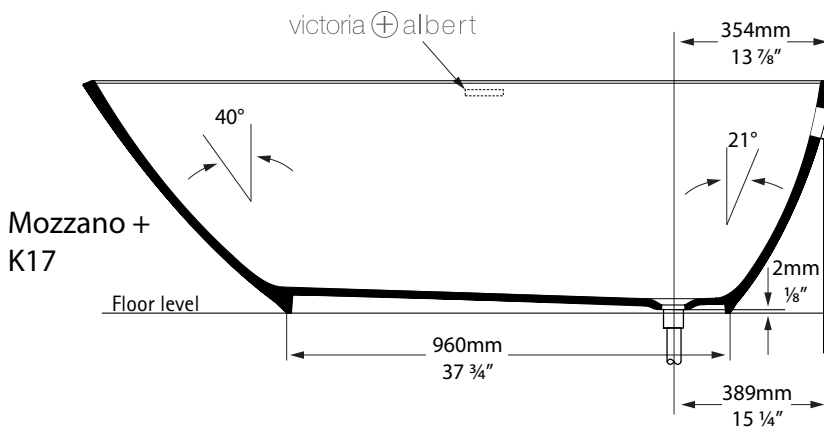
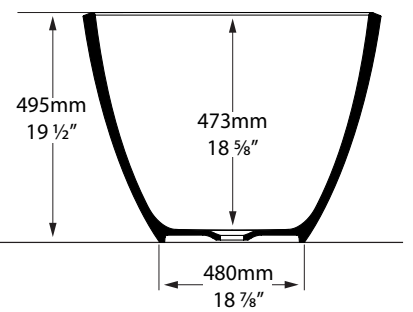
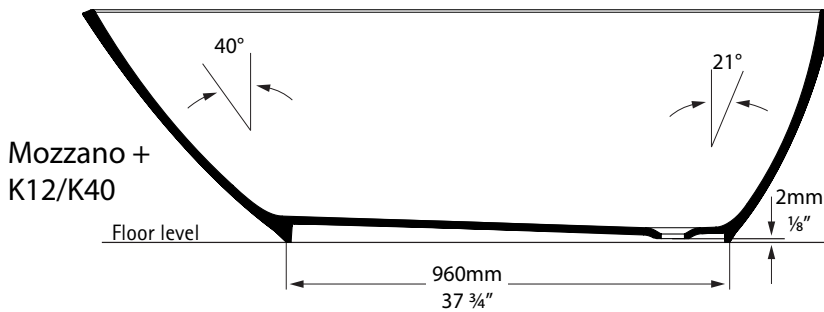





Mozzano UK-EU

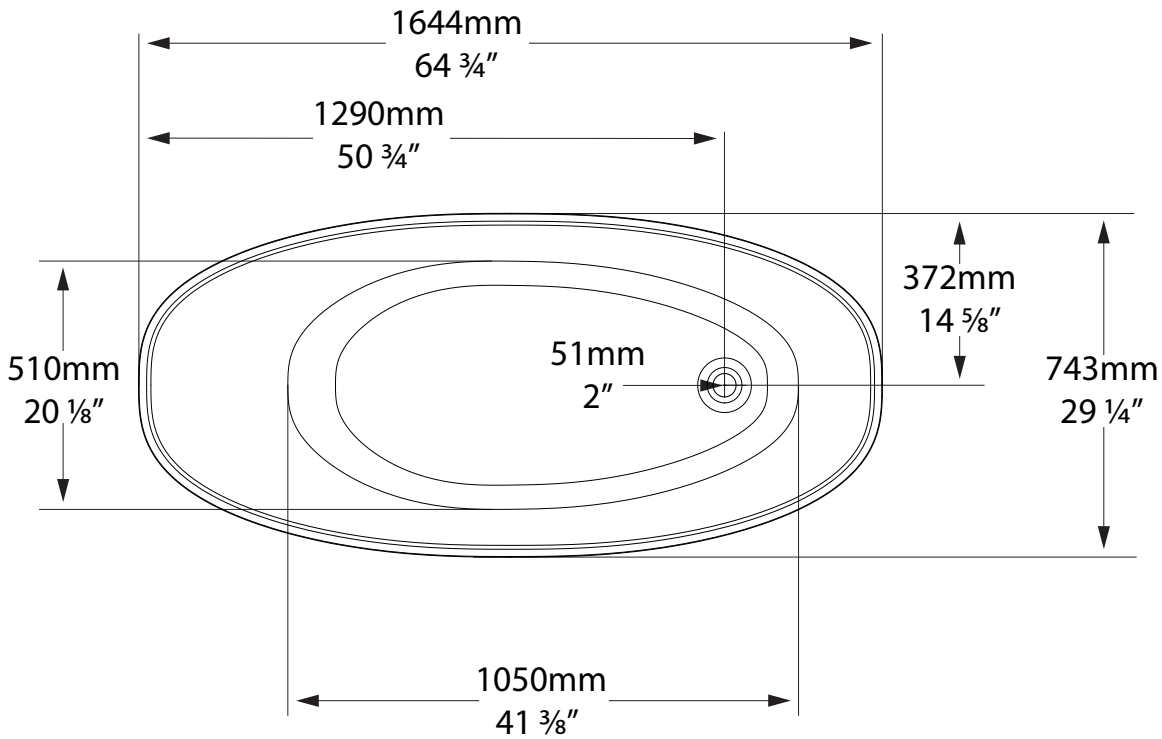



Fitting instructions
Notice d'installation
Instrucciones de montaje
Montageanleitung
Istruzioni di montaggio
Montagehandleiding
Указания по креплению

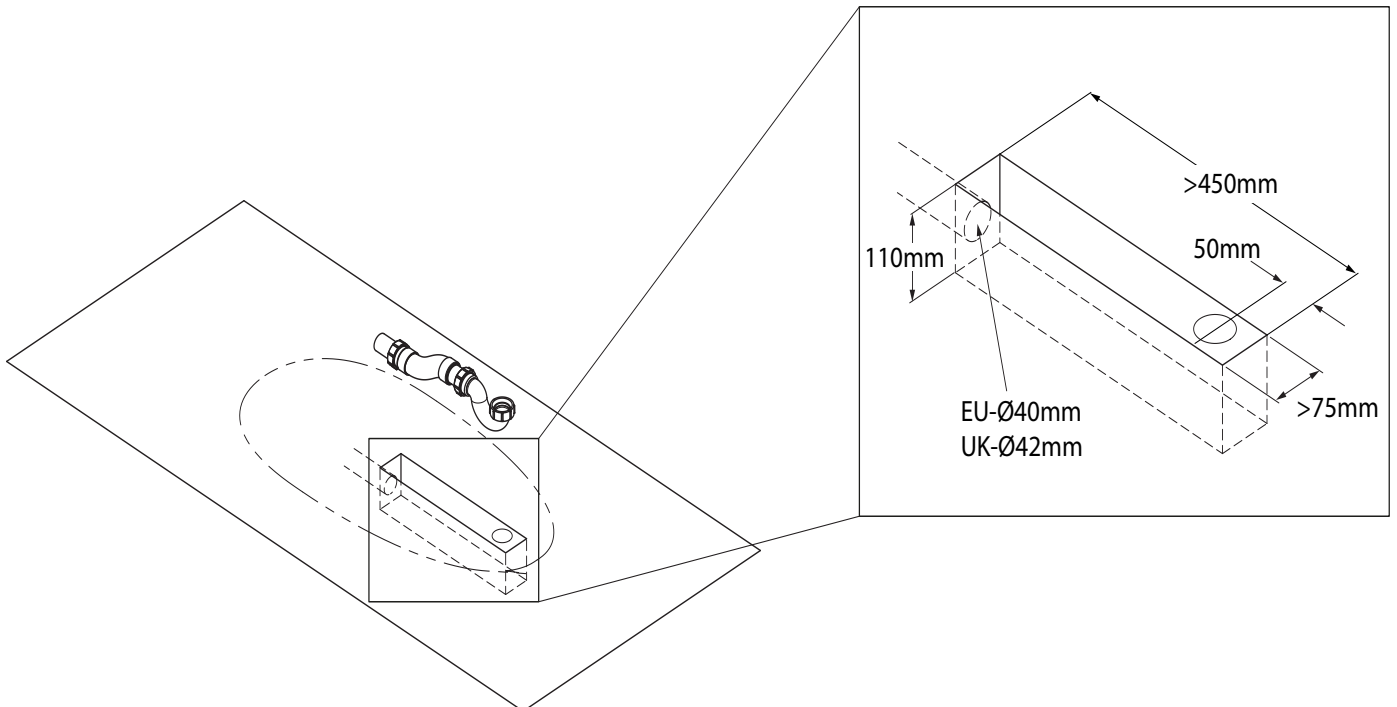


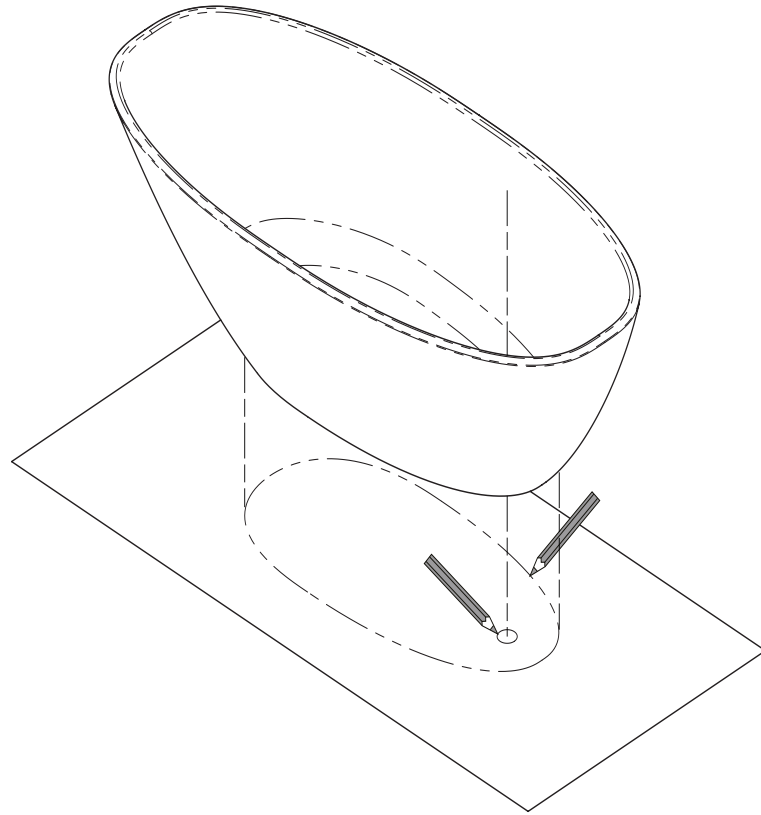


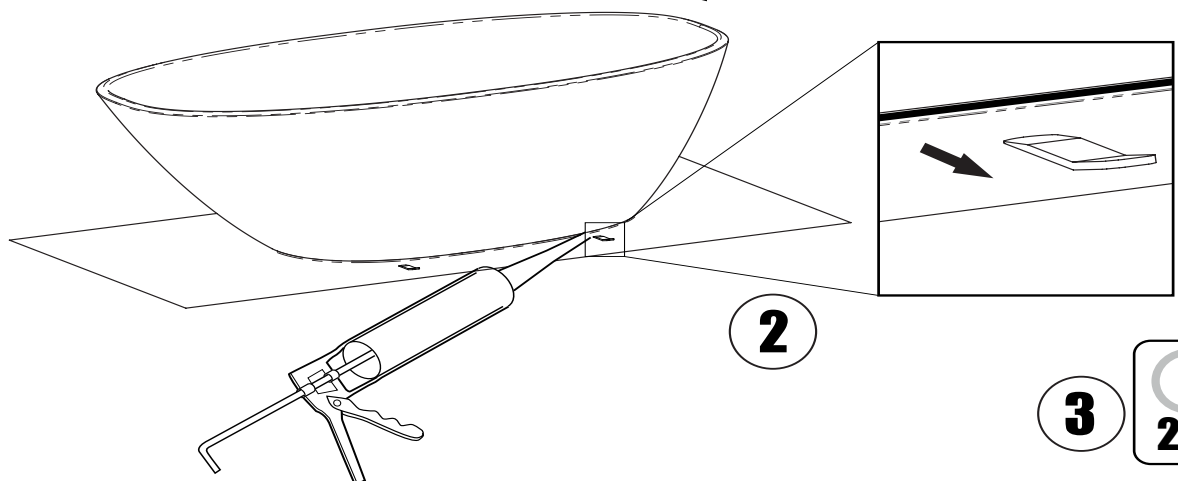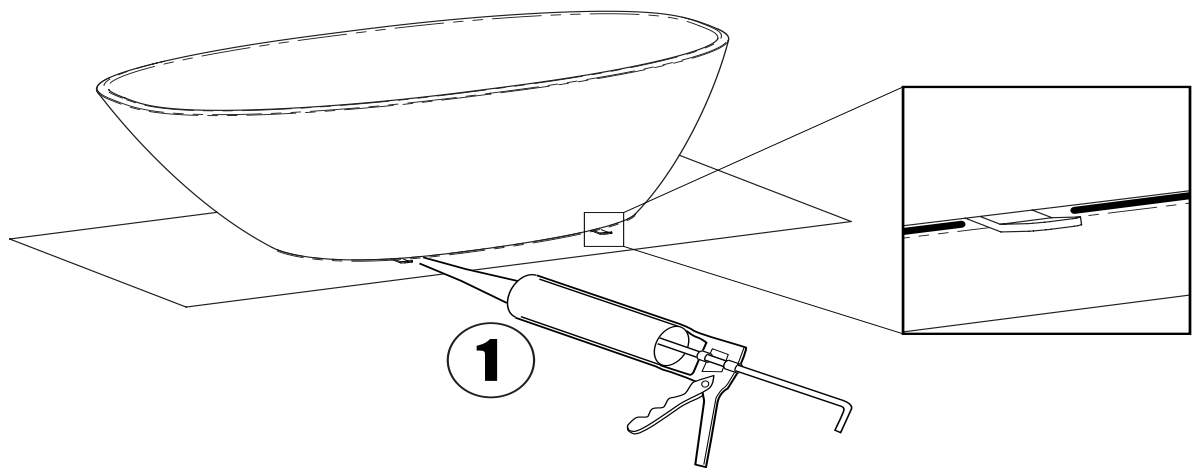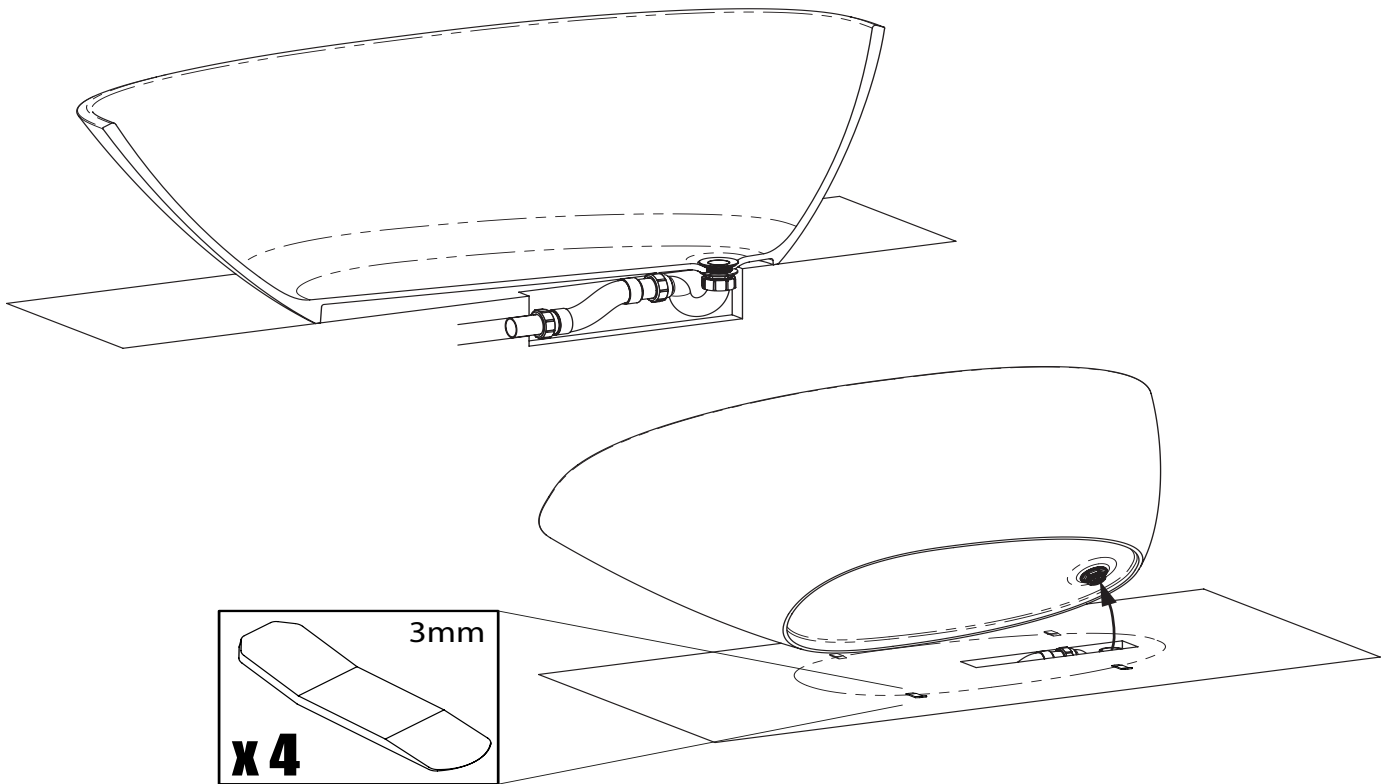




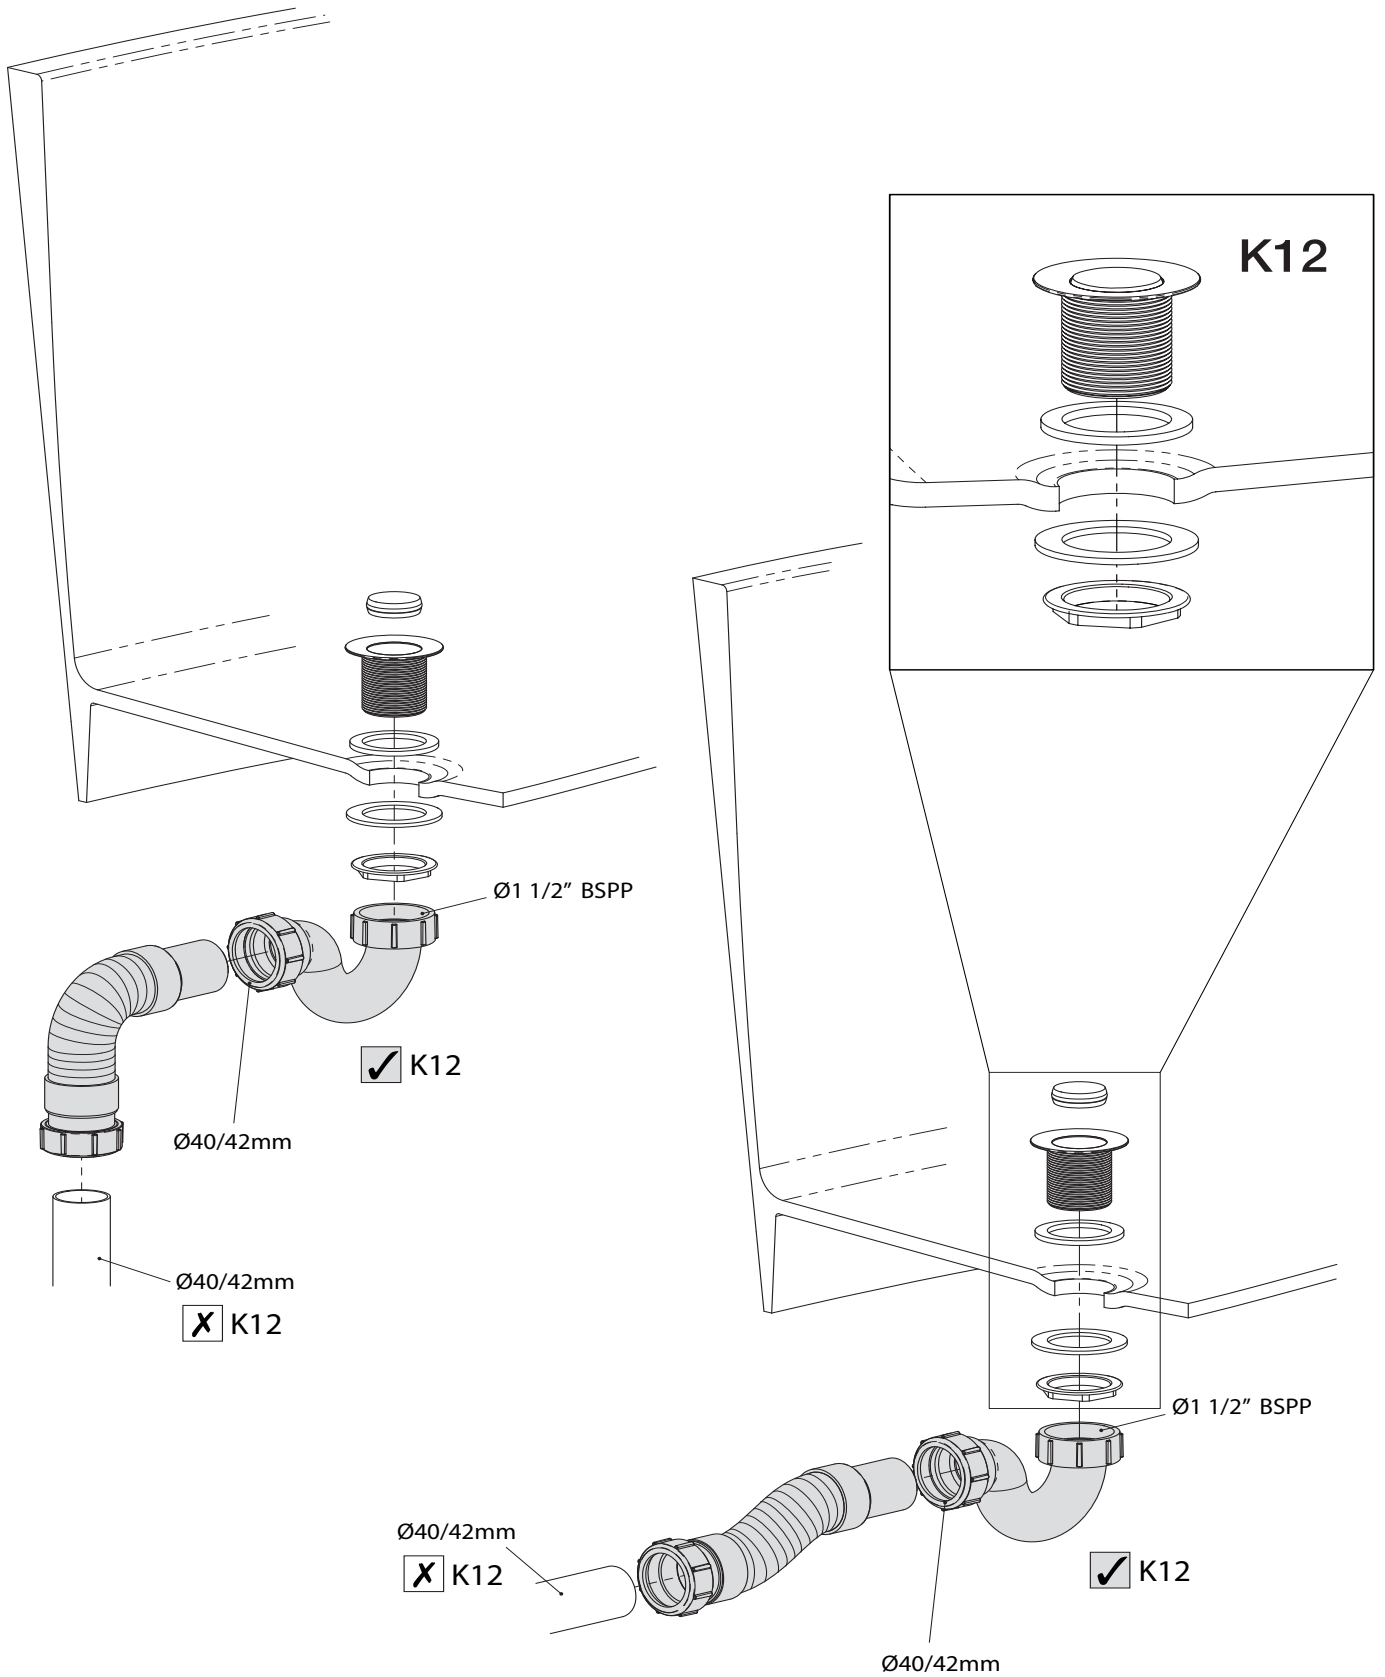


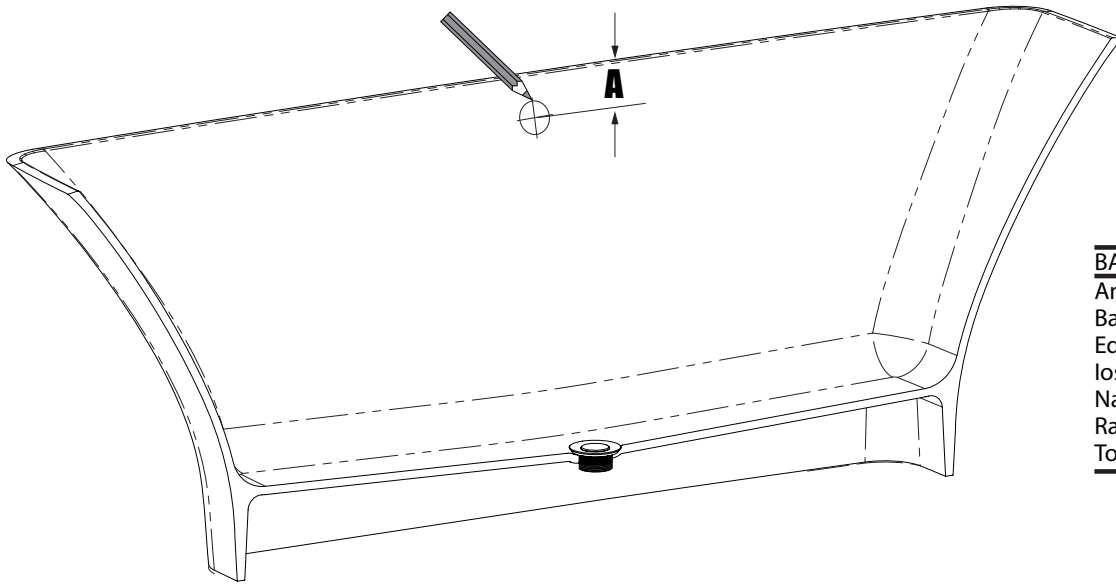


BATH	A (MIN)
Amalfi	135mm
Barcelona	50mm
Edge	50mm
los	50mm
Napoli	50mm
Ravello	65mm
Toulouse	80mm

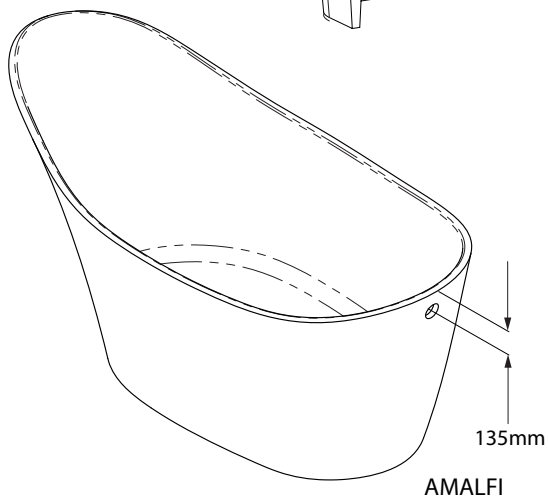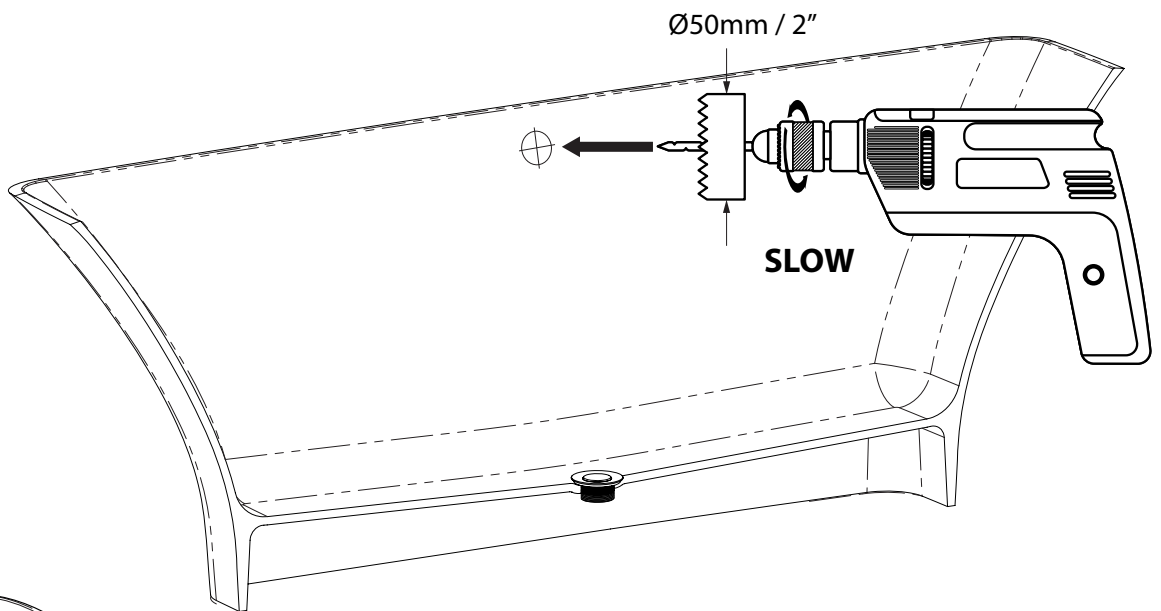

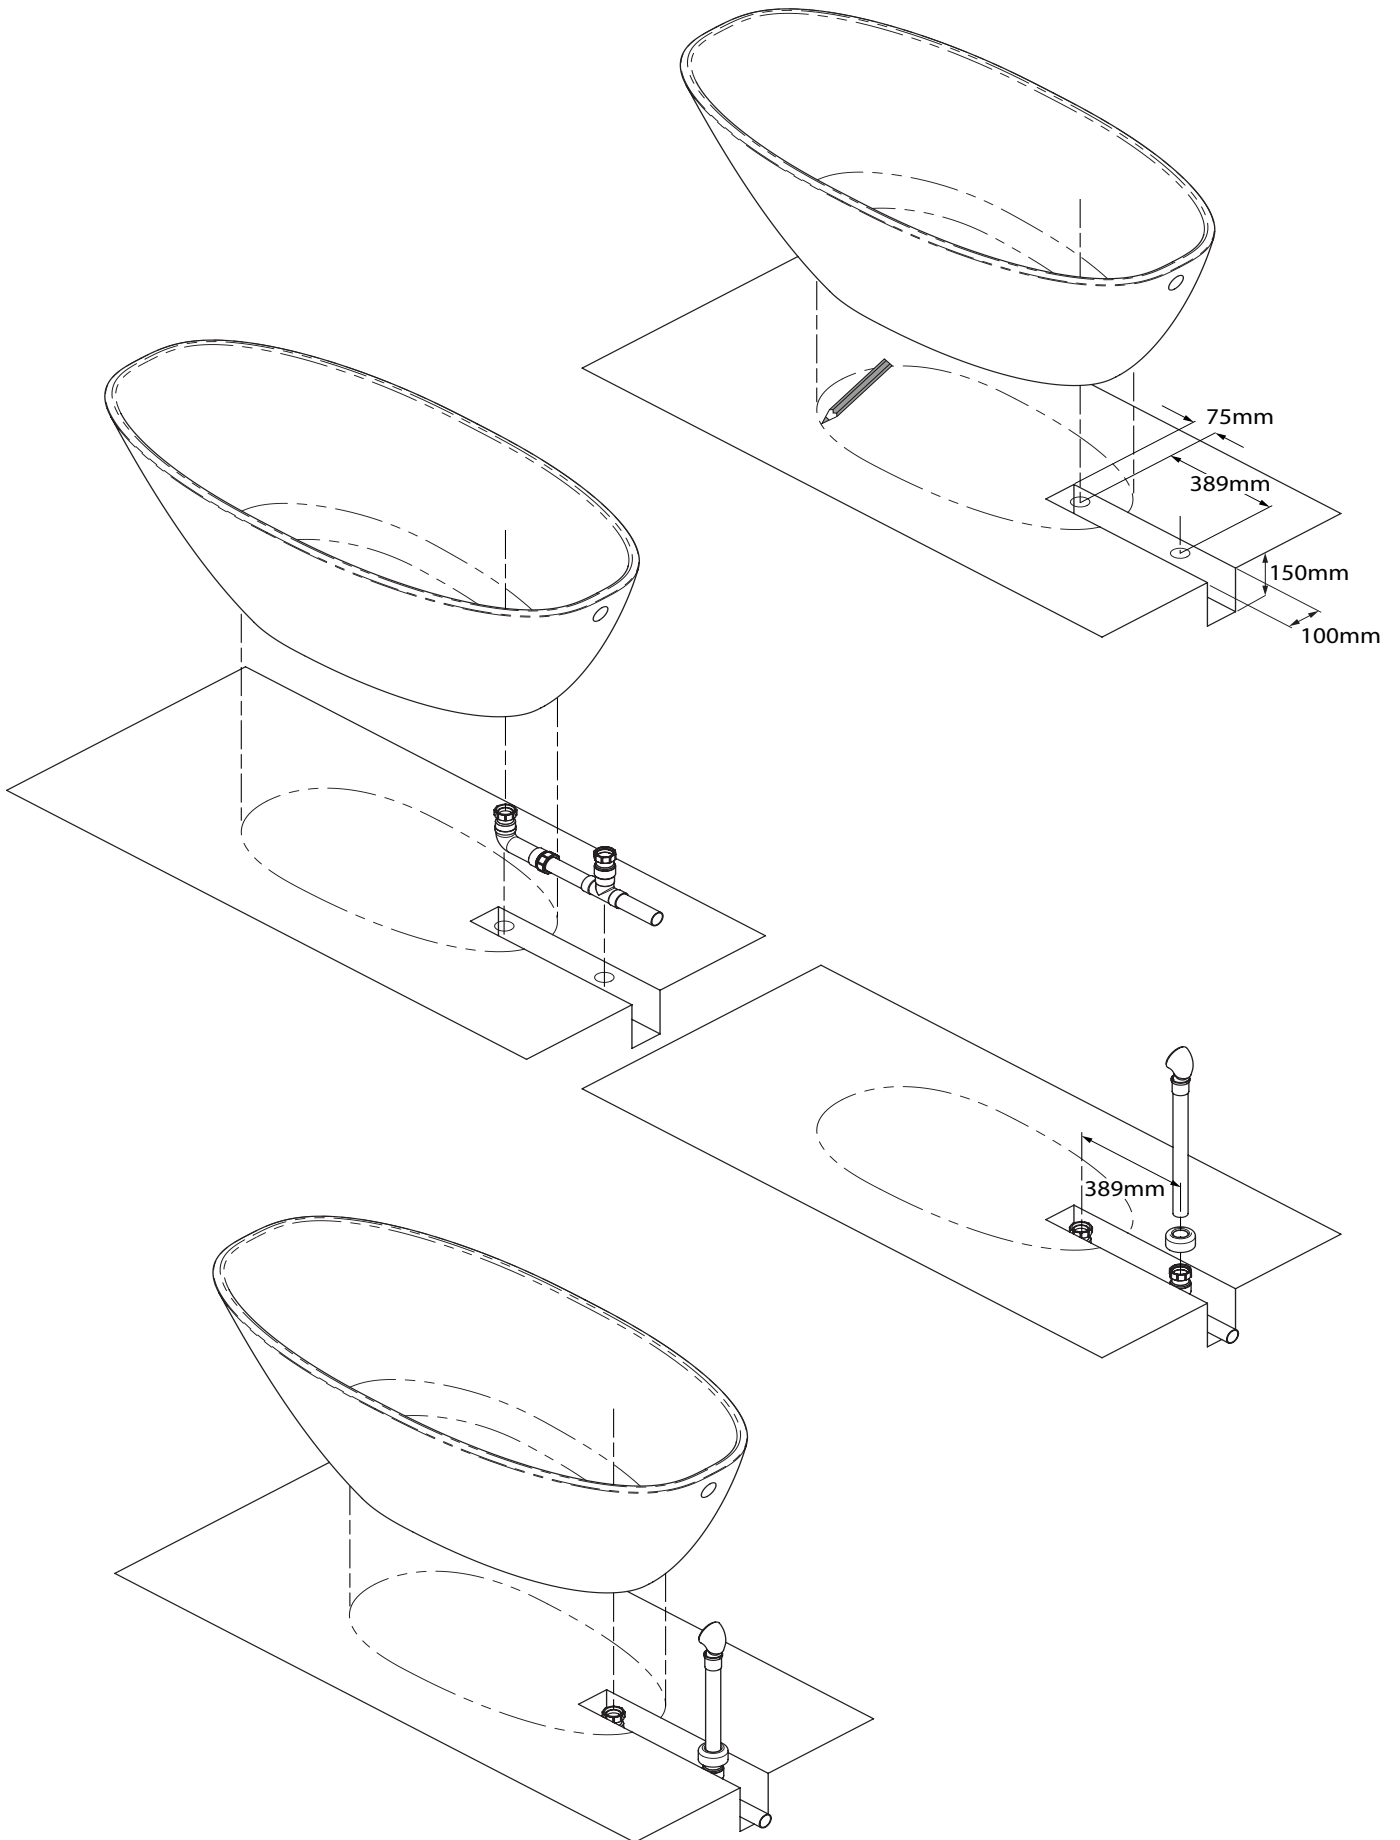


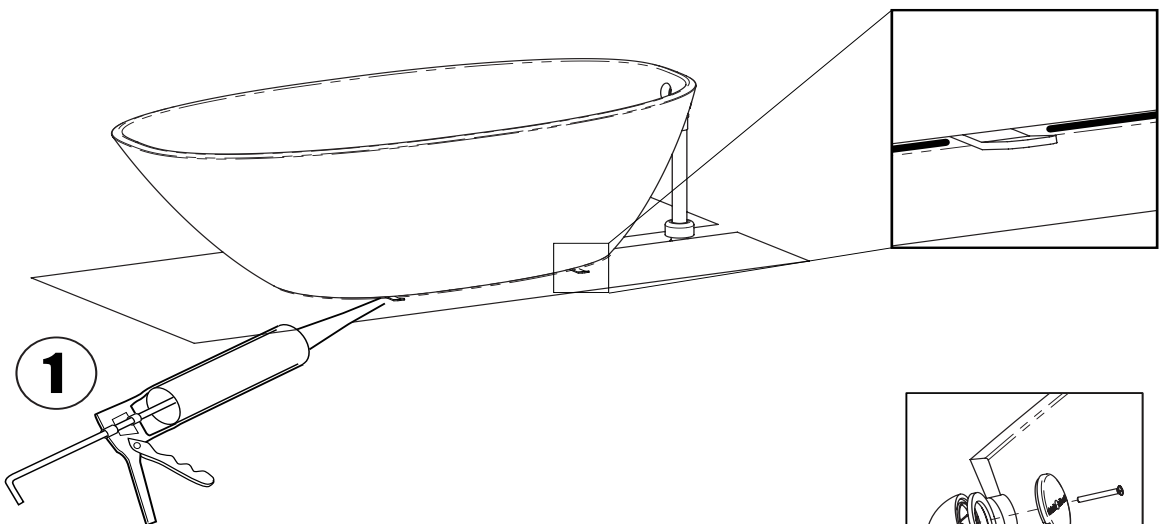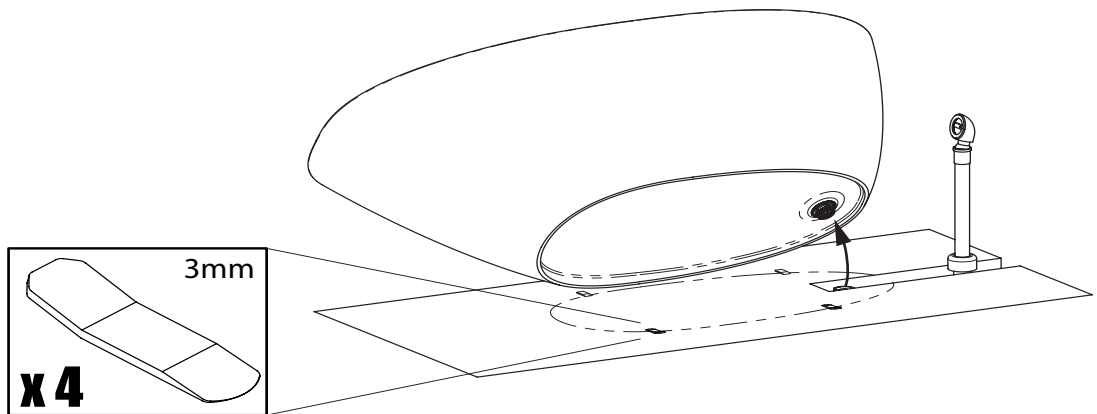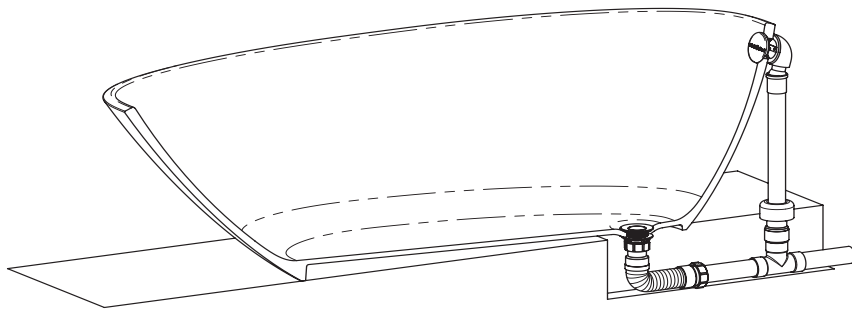


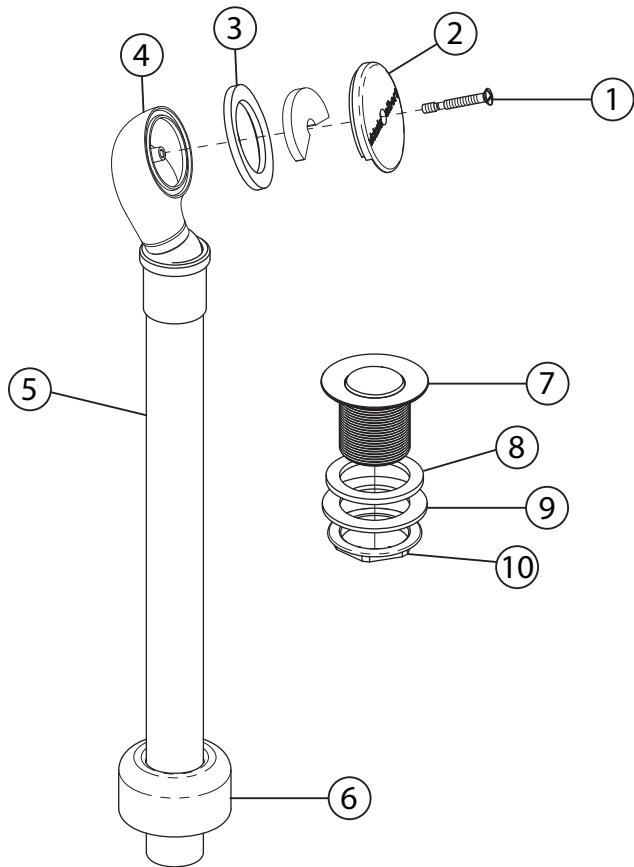
1

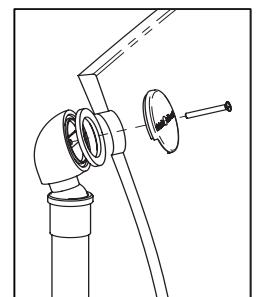

2

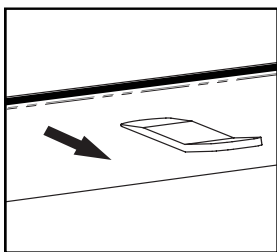


3  24h




1. Snip Screw
2. Overflow Plate
3. Shaped Washer
4. Overflow Body
5. Overflow Pipe
6. Shroud
7. Waste Body
8. Foam Washer
9. Rubber Washer
10. Back Nut


1

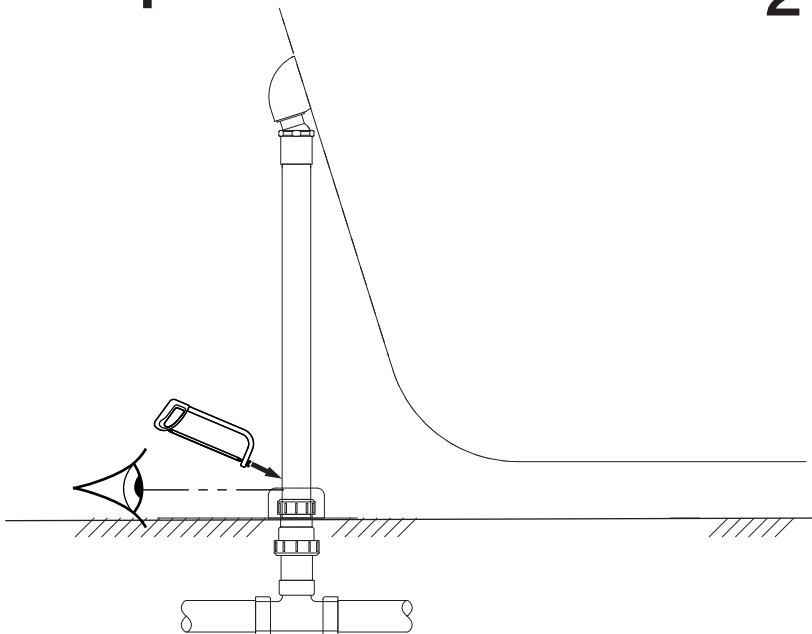


2




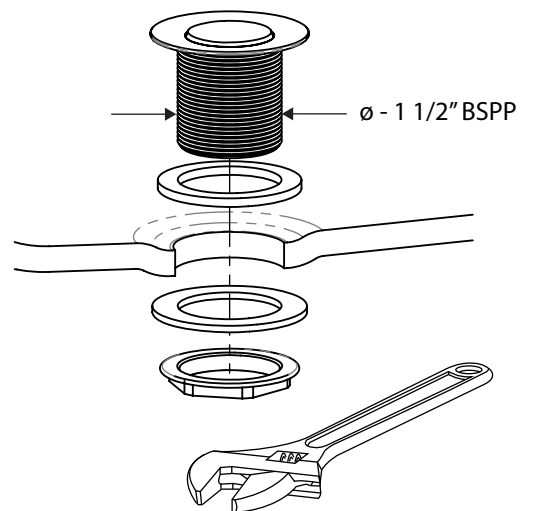



EDGE
IOS
AMALFI
RAVELLO
TOULOUSE

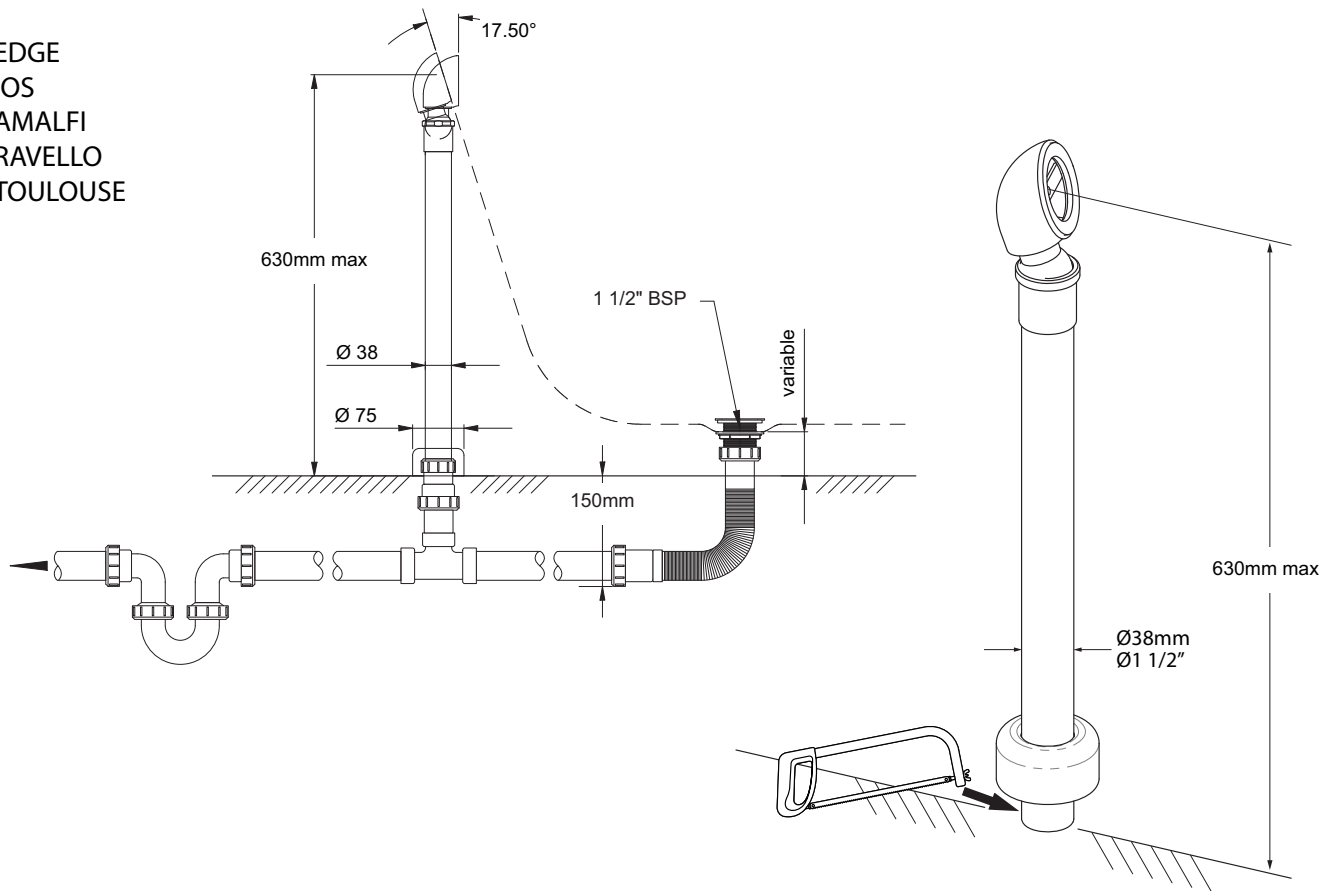

BARCELONA
NAPOLI
CABRITS
MOZZANO

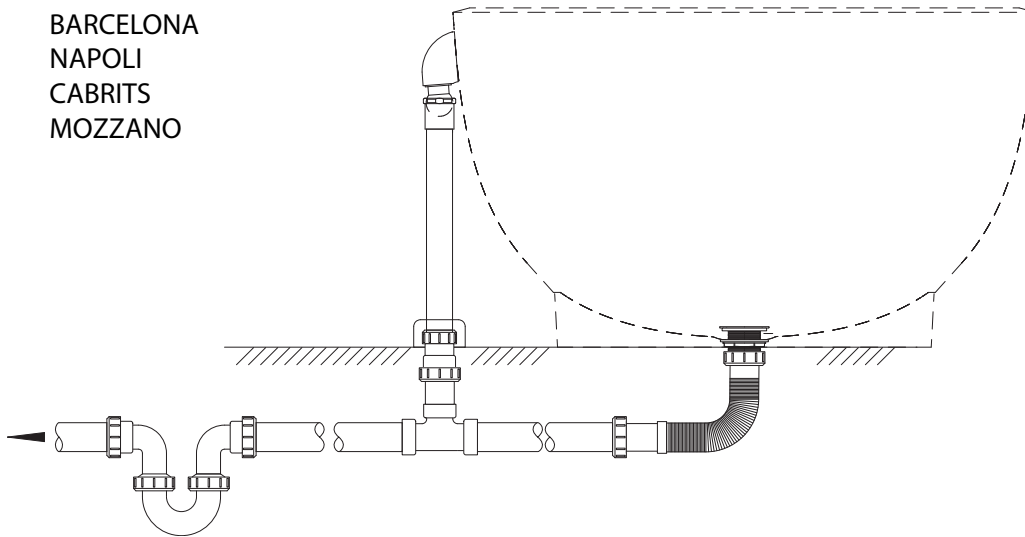

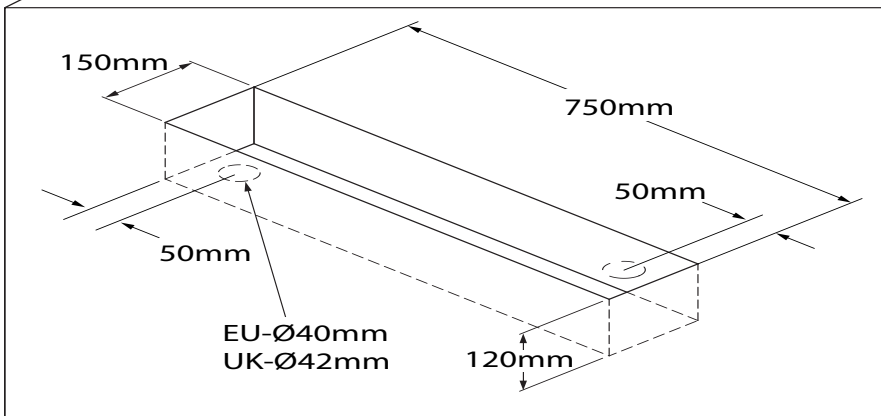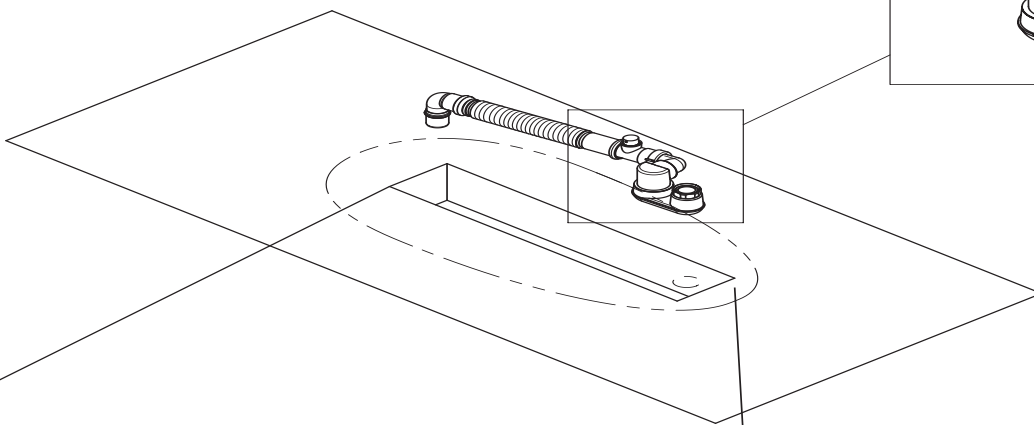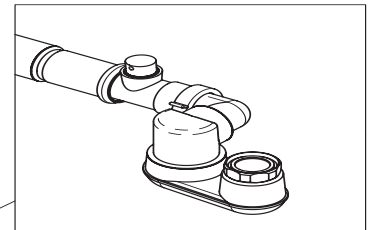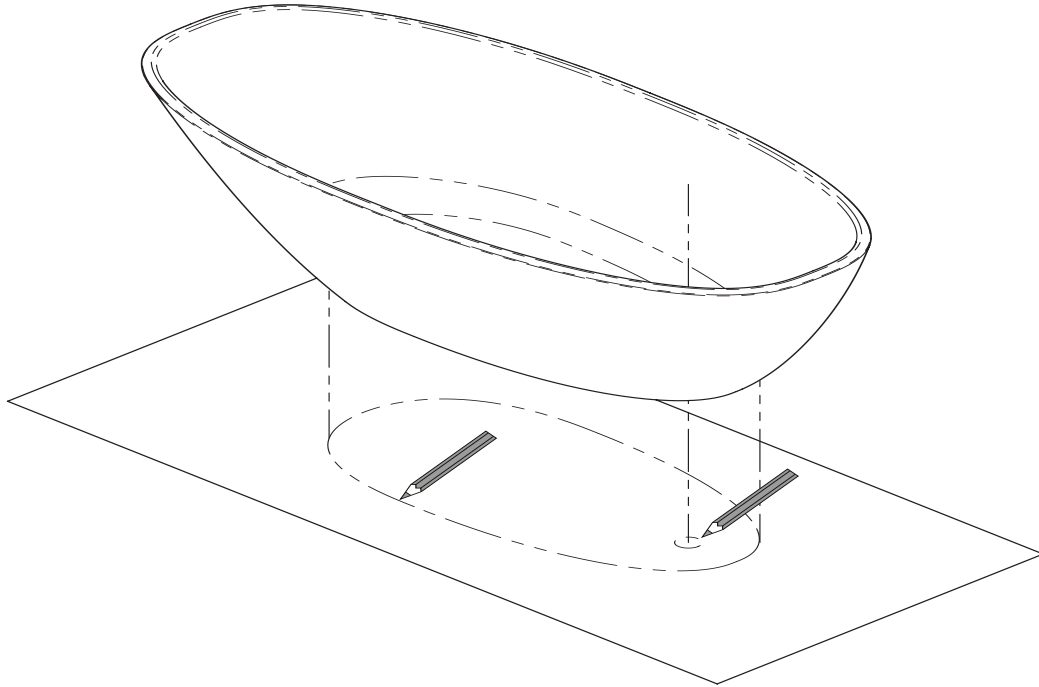

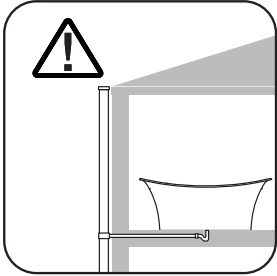

Item	Description
1	Spanner
2	Plug access tool
3	Waste with overflow control
4	Sponge Washer Ø70x48x4
5	PVC Washer Ø70x48x5
6	PVC Washer Ø70x48x3
7	1 1/2" Brass Lock Nut
8	Flat Washer Ø40
9	Siphon
10	Air Admittance Valve
11	Flexible Pipe
12	Elbow Ø40mm
13	UK Adaptor Ø40 to Ø42mm
14	Ø120 x 1mm Silicone Cover



EN: Must use a ventilated waste
 ES: El desagüe debe tener tubo de aspiración
 DE: Belüftete Hauptentwässerungsleitung notwendig
 IT: Deve essere usato uno scaico ventilato
 FR: Veiller à utiliser un système d'évacuation ventilé

